

DELTAWELD 500 - CUSTOM WELD LIBRARY LOAD PROCEDURE

QUICK PATH: soft white key: MORE → Insert USB → soft key: USB → turn LEFT knob to WELD LIBRARY → turn RIGHT knob to LOAD INTO SYSTEM → press RIGHT knob inward to select

KNOB CONTROLS: Use the LEFT knob to scroll to WELD LIBRARY. Once the Weld Library screen is open, use the RIGHT knob to scroll to LOAD INTO SYSTEM and press the RIGHT knob inward to select.



1. Start at the normal weld screen

Select the MORE soft key



2. Enter the USB/menus screen

Insert the usb into the usb port and press the USB soft key



3. Scroll to WELD LIBRARY

Turn the LEFT knob until WELD LIBRARY is highlighted



4. Open WELD LIBRARY

The Weld Library screen opens. Turn the Right knob to select LOAD TO SYSTEM, then press the Right Knob inward to perform the action.

VERIFY AFTER LOADING

- Verify the expected custom programs are available by going to HOME then WELD and a CUSTOM softkey should be available. If so, the custom library is loaded.

Reference: Field walkthrough video supplied 08/28/2026. Screenshots are taken directly from the supplied video.